

Install BrakeSetup Software versie 1.1

Note : you can install the software only one time. To reinstall or install new software, you must first remove the old software. See chapter 2: remove software


Chapter 1: Install software

Step 1.

Klik on [Download BrakeSetup_1_5_0_0.zip](#) to download the software for the brake controller.

Step 2.

Go to your download folder

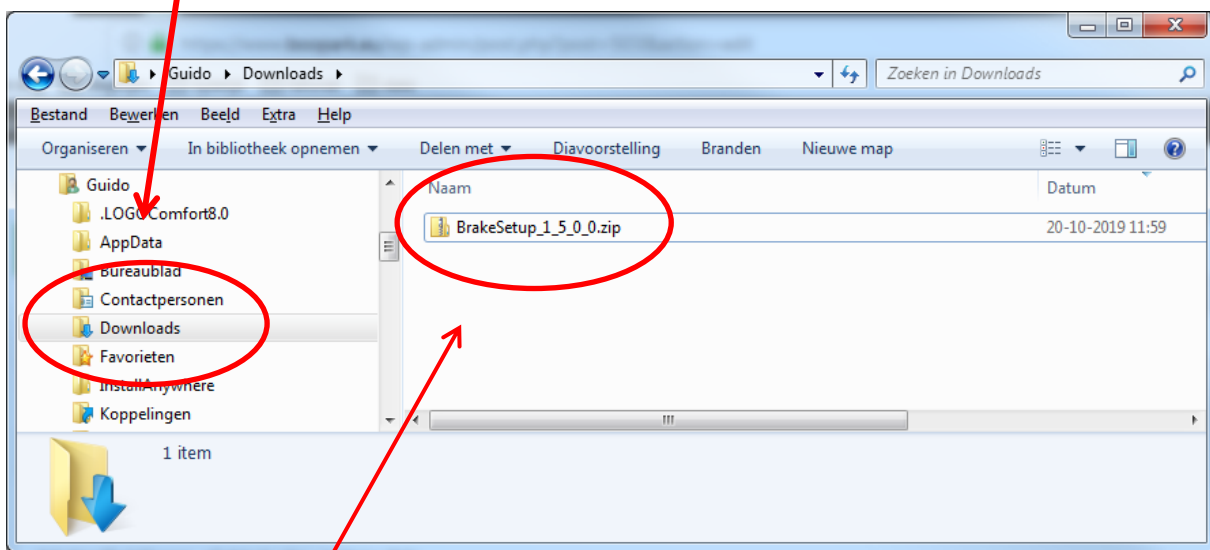


Step 3.

Right click on the brakesetup.zip file in your download folder.

Then click on extract all files (alle bestanden uitpakken)


Now the brakesetup.zip file is extract in your download folder.

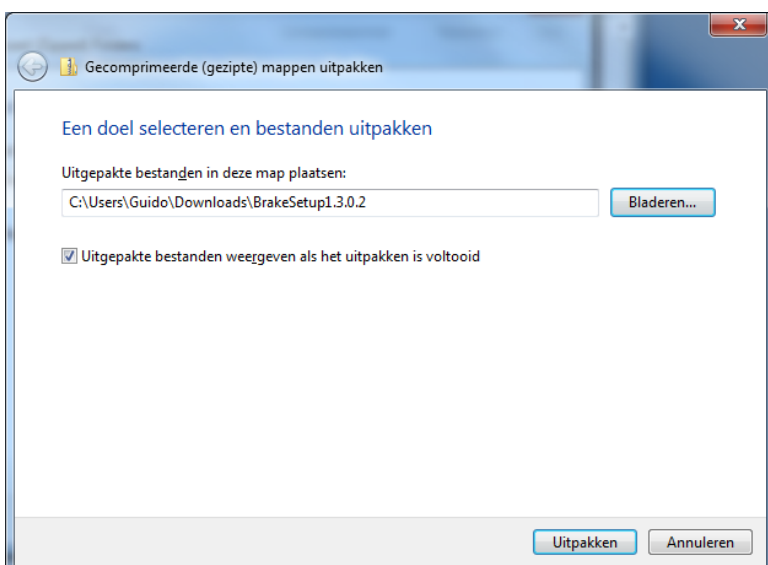

Step 4.


Double click to open the brakesetup folder.

Double click on setup.exe to install the software

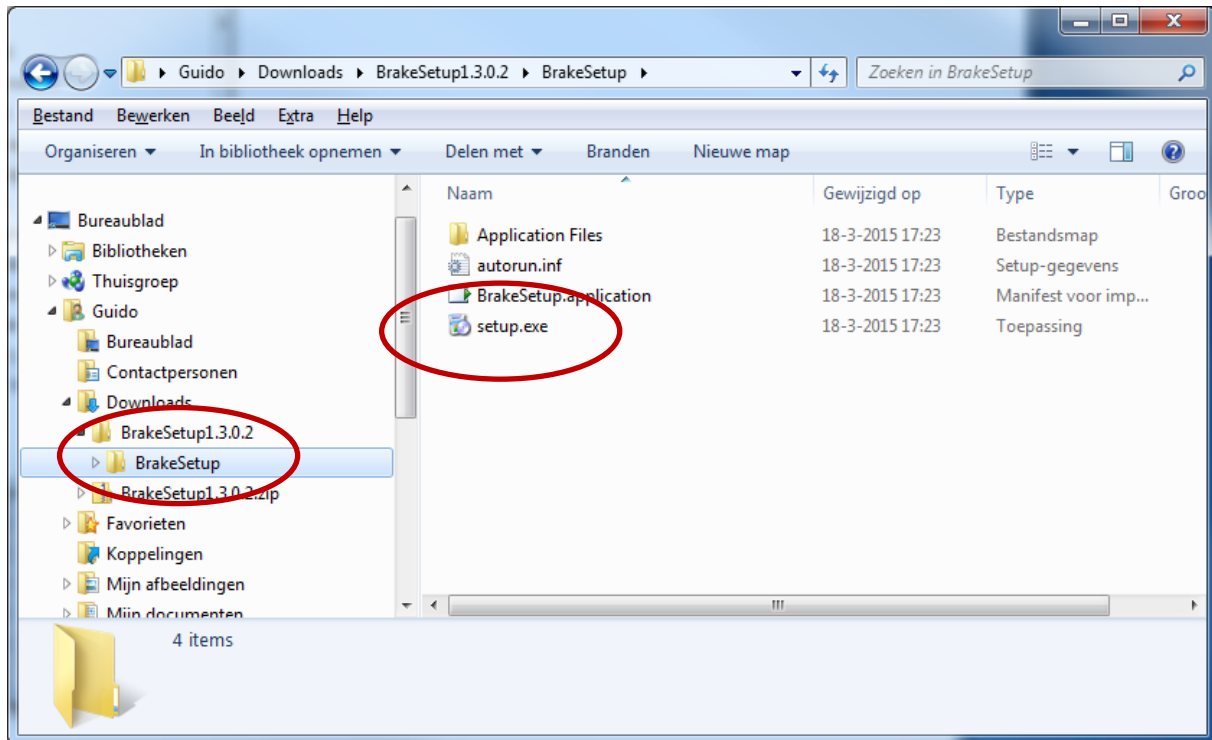


Step 5.

Click on run (uitvoeren)

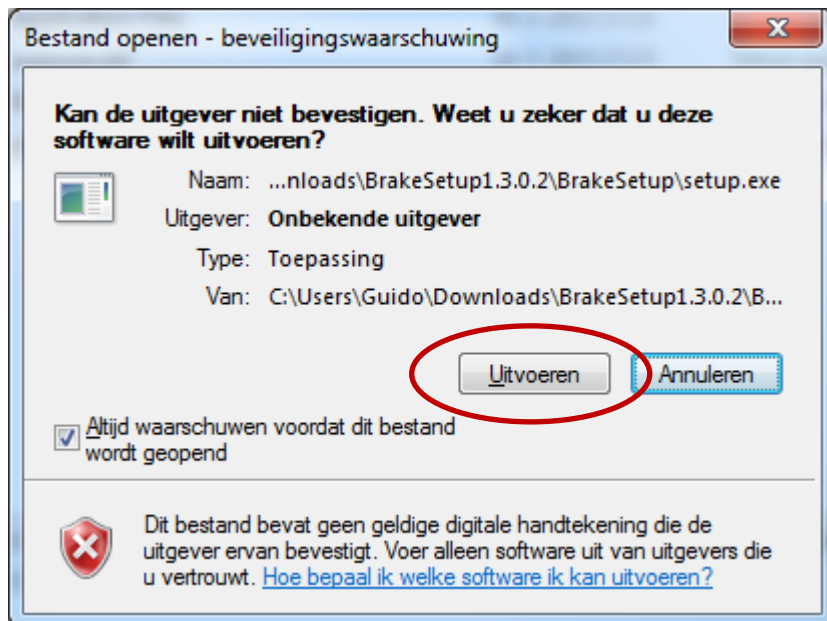


Step 6.

Click install (installeren)

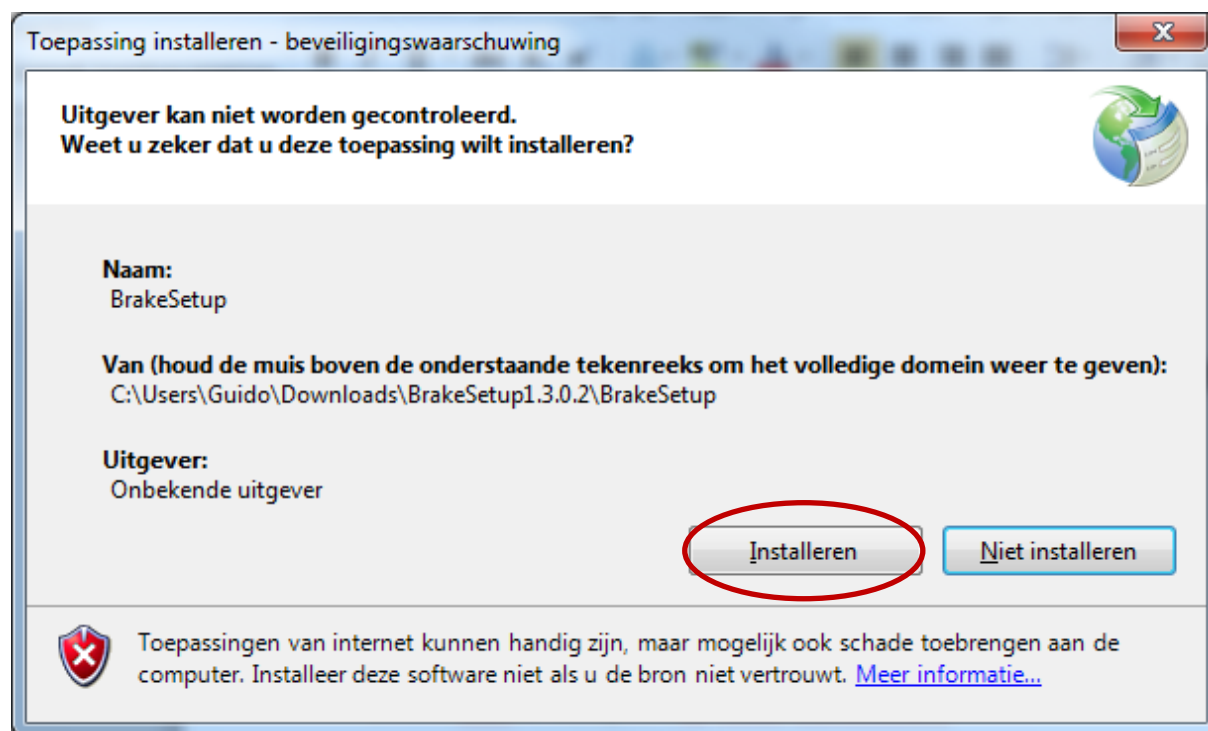

Step 7.

Now the software is installed

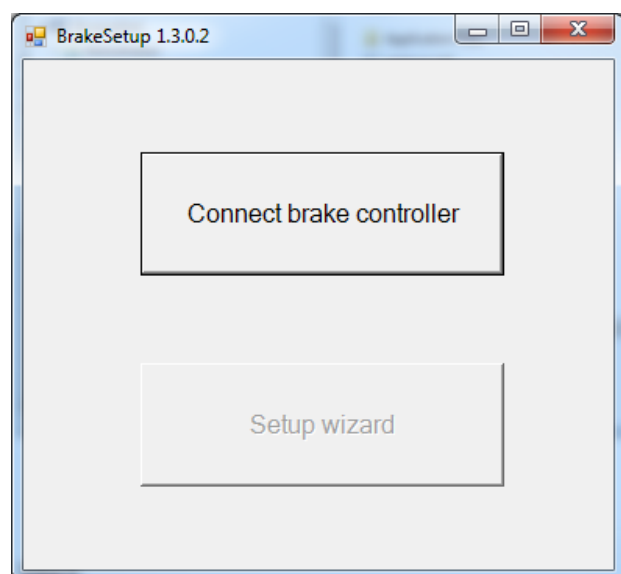


The next time you will run the software go to

START >> ALL PROGRAMS >> JMR >> BRAKESETUP

Chapter 2: remove software

Step 1:

Open windows control panel and click on uninstall a program

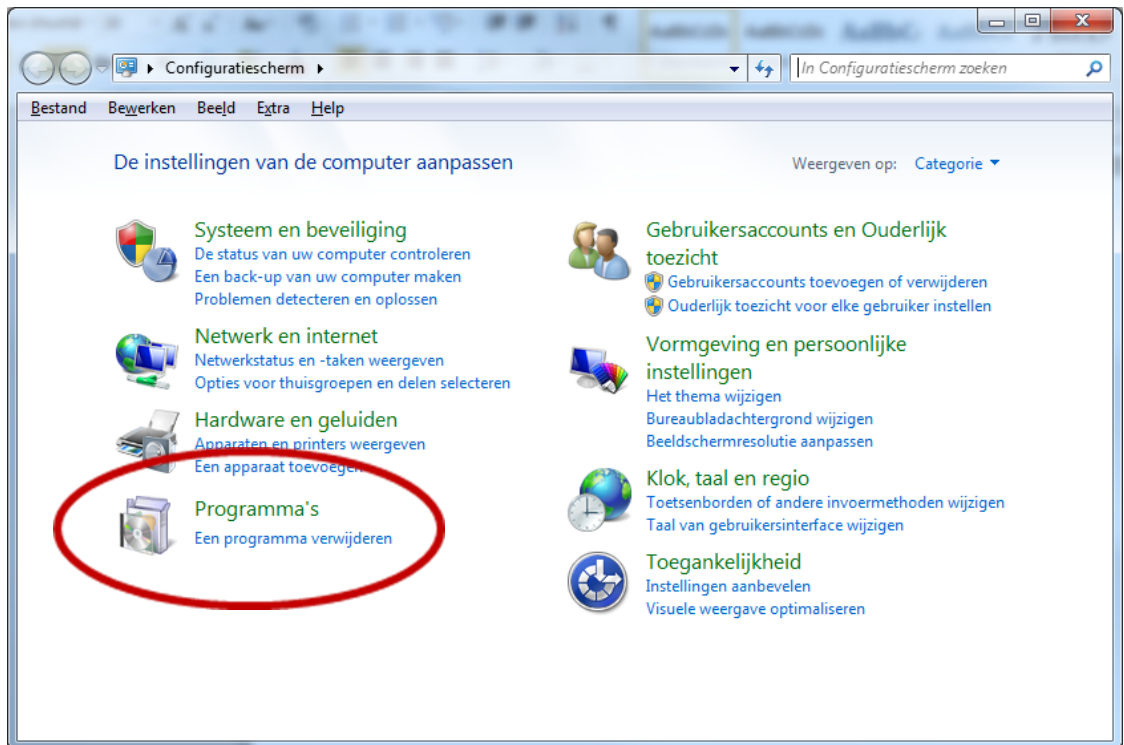

Step 2:

Select brakesetup en click on delete

